Ground Distribution

– G501

NOTE: Wires shown without color codes are black.

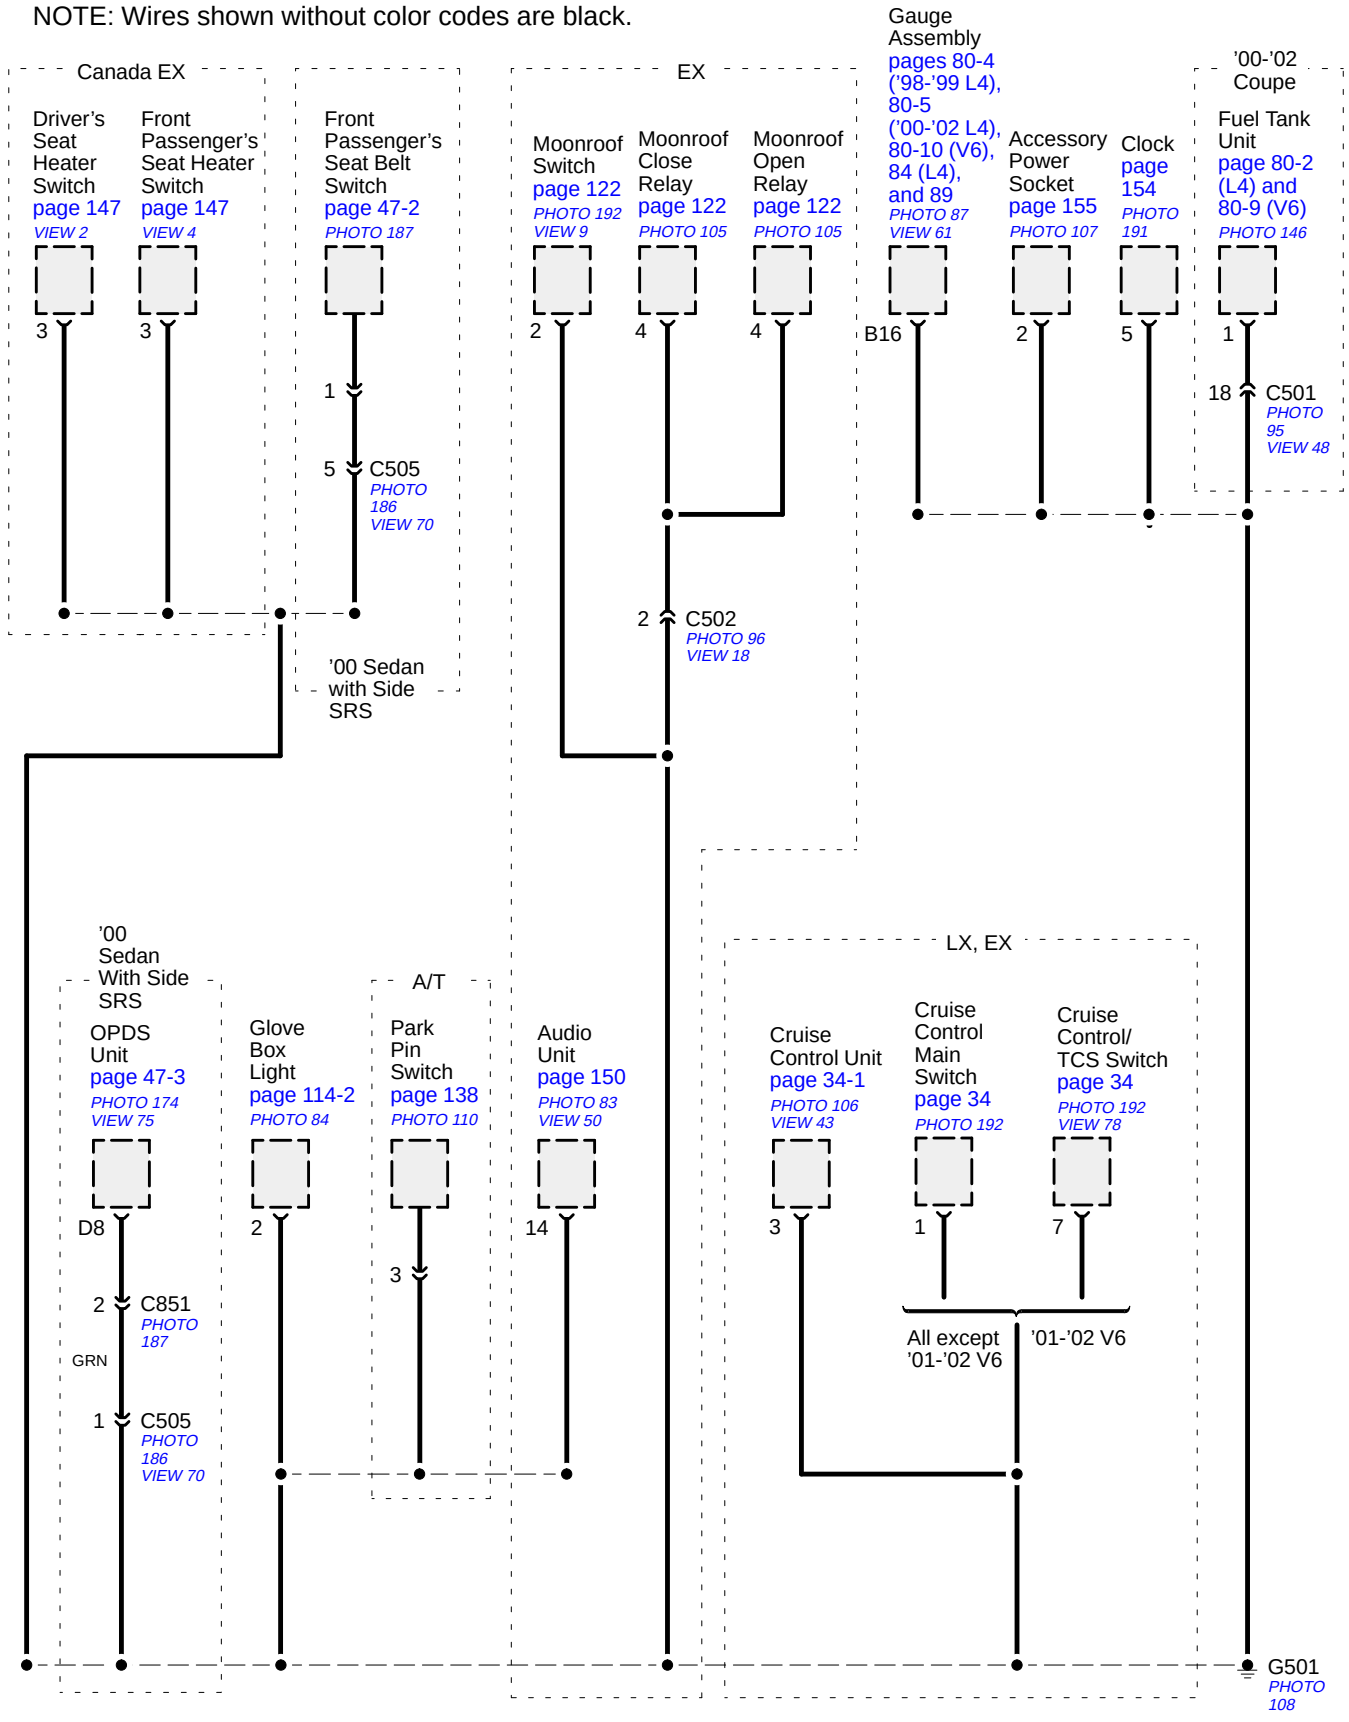
Canada EX
Driver's Seat Heater Switch page 147 VIEW 2
Front Passenger's Seat Heater Switch page 147 VIEW 4
3
3
Front Passenger's Seat Belt Switch page 47-2 PHOTO 187
1
5
C505 PHOTO 186 VIEW 70
'00 Sedan with Side SRS
EX
Moonroof Switch page 122 PHOTO 192 VIEW 9
Moonroof Close Relay page 122 PHOTO 105
Moonroof Open Relay page 122 PHOTO 105
2
4
4
2
C502 PHOTO 96 VIEW 18
Gauge Assembly pages 80-4 ('98-'99 L4), 80-5 ('00-'02 L4), 80-10 (V6), 84 (L4), and 89 PHOTO 87 VIEW 61
Accessory Power Socket page 155 PHOTO 107
Clock page 154 PHOTO 191
B16
2
5
'00-'02 Coupe
Fuel Tank Unit page 80-2 (L4) and 80-9 (V6) PHOTO 146
1
18
C501 PHOTO 95 VIEW 48
'00 Sedan With Side SRS
OPDS Unit page 47-3 PHOTO 174 VIEW 75
D8
2
C851 PHOTO 187
GRN
1
C505 PHOTO 186 VIEW 70
Glove Box Light page 114-2 PHOTO 84
2
A/T
Park Pin Switch page 138 PHOTO 110
3
Audio Unit page 150 PHOTO 83 VIEW 50
14
LX, EX
Cruise Control Unit page 34-1 PHOTO 106 VIEW 43
Cruise Control Main Switch page 34 PHOTO 192
Cruise Control/ TCS Switch page 34 PHOTO 192 VIEW 78
3
1
7
All except '01-'02 V6
'01-'02 V6
G501 PHOTO 108

©2002 American Honda Motor Co., Inc.